

# 两台 MRC-6430 如何实现级联

<i>—</i> ,	接线方法	2
<u> </u>	初步配置	3
Ξ,	设置 IP 控制信号源	7
四,	添加 IR 控制的音源设备	. 11
五,	配置输出区域	16

本例中将使用两台 MRC-6430 作为 6 信号源 12 分区的背景音乐功放,同时也使用系统集成功放给户外的区域使用,音乐信号源此例中使用 IR 红外和 IP 控制流媒体音源。使用 TP7 或 KP7 或智能手机进行控制。

准备的设备

- 1,2台MRC-6430,后级功放;
- 2,无线路由与若干网线, poe 交换机;
- 3, 音箱喇叭余线材;
- 4, 音源设备 DVD, 机顶盒, 红外棒;
- 5, 控制终端, TP7 或 KP7 或智能手机。

基本配置步骤

- 1, 连接设备到同一个网络。
- 2,使用同一网络内的 viewer 配置 MRC-6430。
- 3, 配置连接系统的信号源。
- 4, 配置信号源的音量, 低音 中音 高音。
- 5, 配置所有连接的用户界面。

重要注意

- 1,两台6430需要在同一个局域网内。
- 2, MRC-6430 是默认 DHCP 的。
- 3, IP 控制的信号源需要设置成固定 IP。

购买咨询邮箱: info@dvaco.com 技术咨询与支持邮箱: support@dvaco.com



- . 接线方法

参考下列接线方式:



把对应设备连接好后,进行配置工作。

购买咨询邮箱: info@dvaco.com 技术咨询与支持邮箱: support@dvaco.com



服务热线: 400-058-5288

全宅智能 & 私人影院第一品牌

## 二,初步配置



1, 在手机上打开软件

	All Media										
Zor	ne 1	Zor	ne 2	Zor	ne 3	Zoi	ne 4	Zor	ne 5	Zor	ne 6
	-	V	- ^	Ω		Ω	-	Ω		$\nabla$	- ^
	-	v	8				-			v	5

2,长按上方 niles logo ,进入密码输入页面,密码 3526.



	<		Installer	Access		>
		1	2	3		
		4	5	6		
		7	8	9		
			0			
1.1 Build 10. Build Date:J	.0, MCU Versi un 25 2014	on 1.11.8 Revision (	)			
进入配置	页面如下:	:				
			System Co	nfiguration		
Configure C	hassis					
Configure S	ources					
Configure Z	ones					
Configure U	ser Interfaces	5				
Configure H	ome Theater	тv				
Configure H	andheld Rem	ote				
	达 古古 半 4		サ ノ ユ, ヤロ ヤ年 ー		古工扣	A 11

,3,点击第一项进行系统配置,进入开机模式配置,Constant 一直开机,Audio sense 音频嗅探开机。选择后,点 Apply 保存。

购买咨询邮箱: info@dvaco.com 技术咨询与支持邮箱: support@dvaco.com



t	< -	CONFIGURE CHASSIS	>
	Constant Audio Sense		
			Apply
占击右上	鱼的右箭斗,	去到下一步。配置 IP 地址, 默认为 DHCP。	

t.	<b>C</b>	Chassis E	ONFIGURE CHAS	sis figuration		>
				3		
Enable DH	СР				Yes	No
A.1.1						
Address						
Subnet					0.0	
Gateway				192.16	68.1.1	
DNS				192.16	\$8.1.1	
						Apply

5,下一步,添加扩展 6430,。

让扩展 MRC-6430 开机,点击添加,会自动搜索网络内的 MRC-6430。

购买咨询邮箱: info@dvaco.com 技术咨询与支持邮箱: support@dvaco.com



		CONFIGURE CHASSIS		
Ĺ	<	Extender Chassis Configuration		>
		Not Installed		
		Install MRA Extender	Add	Remove
			The second s	Marca III

搜索成功后,会出现另外一台 6430。点击选择后,点击 OK 添加。

购买咨询邮箱: info@dvaco.com 技术咨询与支持邮箱: support@dvaco.com



	Install MRA Extende	r
192.168.0.24:90		
		Cancel Ok

成功添加后,该 MRC-6430 会自动变成扩展主机。

#### 三,设置 IP 控制信号源

1,回到配置首页,点击配置信号源。

	System Configuration	
Configure	Chassis	
Configure	Sources	
Configure	Zones	
Configure	User Interfaces	
Configure	Home Theater TV	
Configure	Handheld Remote	

点击添加按钮。

购买咨询邮箱: info@dvaco.com 技术咨询与支持邮箱: support@dvaco.com





<b>@</b> 1	RC6430 F8-57-2E-00-15-0C			
		Add New Source		
	IP Controlled Source			
	IR Controlled Source			
			Cancel	Ok

2,如果是媒体服务器,选择 IP controlled source ,出现以下画面,选择 media server。

购买咨询邮箱: info@dvaco.com 技术咨询与支持邮箱: support@dvaco.com



2	ERC6430 F8-57-2E-00-15-0C	
	Add New Sour	rce
	Media Server	
	Tuner	
		Cancel
		Guilder
3,	选中 Logitech media server,点击右边箭头。	
2	ERC6430 F8-57-2E-00-15-0C	
	Add New Sour	rce
	0	
	Sonos	
	Autonomic Media Server	
	Logitech Media Server	
	Yamaha YNCA (Ethernet)	
		Cancel Ok

Niles MRC 6430 会自动搜索网络内的 Logitech media server

购买咨询邮箱: info@dvaco.com 技术咨询与支持邮箱: support@dvaco.com



MRC6430 F8-57-2E-00-15-0C				
	Add Nev	v Source		
Searching			Cancel	Ok

出现后,点击选择,OK

Add Nev	v Source		
fusionmusic @192.168.0.96:9090			
		Cancel	Ok

4, 添加成功后, 如下图所示出现了3组信号源:



服务热线: 400-058-5288

全宅智能 & 私人影院第一品牌

TRC6430 F8-57-2E-00-15-0C	
+ <	CONFIGURE SOURCES
HAIER / ALL MODELS	Source Configuration
	Remove
Source Name	input 4
IR Emitter	< NONE >
	Remove
Server Address	192.168.0.96
Player Name	player1_(analog,blue)
Player Name	player2_(analog,green)
Player Name	player3_(analog,pink)
	Add

### 四,添加 IR 控制的音源设备

1, 选择 IR Controlled source。

 Add New S	ource			
	Add New S	Add New Source	Add New Source	Add New Source

,2,选择设备类型,此例中选择电视盒子 set top box

购买咨询邮箱: info@dvaco.com 技术咨询与支持邮箱: support@dvaco.com



Add	New Source
Media Manager	
Set Top Box	
CD	
Tuner	
DVD	
Blu Ray	
IPod	

3,选择品牌。

Add N	lew Source	
Digiturk		
Dilog		
DirecTV		
Dish		
Dizipia		
Dr. HD		
Dream Multimedia		

4,选择品牌下哪个型号。

购买咨询邮箱: info@dvaco.com 技术咨询与支持邮箱: support@dvaco.com

DVAC0 / 华歌智慧科技有限公司

,



H and HR Series Satellite All Models Address 1         H and HR Series Satellite All Models Address 3         H and HR Series Satellite All Models Address 4         H and HR Series Satellite All Models Address 5         H and HR Series Satellite All Models Address 6         H and HR Series Satellite All Models Address 7         Cancel	Atellite All Models Address 1 Atellite All Models Address 2 Atellite All Models Address 3 Atellite All Models Address 5 Atellite All Models Address 6 Atellite All Models Address 7 Cancel Ok Configure Source Sources Source Configuration Certes SATELLITE ALL MO ERIES SATELLITE ALL MO H and HR Series Satellite All Models Addr No		dd New Source	
H and HR Series Satellite All Models Address 2 H and HR Series Satellite All Models Address 3 H and HR Series Satellite All Models Address 5 H and HR Series Satellite All Models Address 6 H and HR Series Satellite All Models Address 7 Cancel	atellite All Models Address 2 atellite All Models Address 3 atellite All Models Address 5 atellite All Models Address 6 atellite All Models Address 7 Cancel Ok Configure sources Source Configuration	H and HR Series Satellite All Models Addr	ess 1	
H and HR Series Satellite All Models Address 3 H and HR Series Satellite All Models Address 5 H and HR Series Satellite All Models Address 6 H and HR Series Satellite All Models Address 7 Cancel	Atellite All Models Address 3 Atellite All Models Address 5 Atellite All Models Address 6 Atellite All Models Address 7 Cancel Ok ConFigure Sources Source Configuration Ceries SATELLITE ALL MO Remove H and HR Series Satellite All Models Addr No	H and HR Series Satellite All Models Addre	ess 2	
H and HR Series Satellite All Models Address 4 H and HR Series Satellite All Models Address 6 H and HR Series Satellite All Models Address 7 Cancel	Atellite All Models Address 4 atellite All Models Address 5 atellite All Models Address 7 Cancel Ok Cancel Ok ConFIGURE SOURCES Source Configuration ERIES SATELLITE ALL MO Remove H and HR Series Satellite All Models Addr No	H and HR Series Satellite All Models Addr	ess 3	
H and HR Series Satellite All Models Address 5 H and HR Series Satellite All Models Address 7 Cancel	Atellite All Models Address 5 Atellite All Models Address 7 Cancel Ok Concile Source Sources Source Configuration Remove H and HR Series Satellite All Models Addr No	H and HR Series Satellite All Models Addr	ess 4	
H and HR Series Satellite All Models Address 6 H and HR Series Satellite All Models Address 7 Cancel	Atellite All Models Address 6 Atellite All Models Address 7 Cancel Ok ConFigure Sources Source Configuration SERIES SATELLITE ALL MO H and HR Series Satellite All Models Addr No	H and HR Series Satellite All Models Addre	ess 5	
H and HR Series Satellite All Models Address 7 Cancel	Atellite All Models Address 7 Cancel Ok Configure Source Sources Source Configuration Remove H and HR Series Satellite All Models Addr <none> No</none>	H and HR Series Satellite All Models Addre	ess 6	
Cancel t < CONFIGURE SOURCES Source Configuration	Configure Sources Source Configuration	H and HR Series Satellite All Models Addre	ess 7	
t < CONFIGURE SOURCES Source Configuration	CONFIGURE SOURCES Source Configuration		Cancel	Ok
	Remove H and HR Series Satellite All Models Addr  No	£ <	CONFIGURE SOURCES	- >
IRECTV / H AND HR SERIES SATELLITE ALL MO	H and HR Series Satellite All Models Addr < NONE > No			
ource Name H and HR Series Satellite All Models	<none></none>	RECTV / H AND HR SERIES SATELLITE ALL	. MO	Remove
R Emitter < NONE >		IRECTV / H AND HR SERIES SATELLITE ALL iource Name	- MO H and HR Series Satellite All M	Remove odels Addr
No No		NRECTV / H AND HR SERIES SATELLITE ALL Source Name R Emitter	Mo H and HR Series Satellite All Mo < NONE >	Remove
		RECTV / H AND HR SERIES SATELLITE ALL purce Name Emitter now Favorites	- MO H and HR Series Satellite All Mo < <u>NONE &gt;</u> No	Remove odels Addr

5, 之后重命名

购买咨询邮箱:info@dvaco.com 技术咨询与支持邮箱:support@dvaco.com



	CONFIGURE SOURCES	- >
L So	ource Configuration	
DIRECTV / HAND HR SERIES SATELLITE ALL MC		Remove
Source Name	H and HR Series Sate llite All Mo	dels Addr
IR Emitter	< NONE >	
Show Favorites	No	
		Add
		×
Set Source Name		
SAT TV		
SATIV		

配置 IR 输出口。

购买咨询邮箱:info@dvaco.com 技术咨询与支持邮箱:support@dvaco.com



t	CONFIGURE SOURCES Source Configuration					
DIRECTV /	H AND HR SER	IES SATELLITE ALL MO	Remove			
Source N	lame	SAT TV				
IR Emitte	r	IR Output 01				
Show Far	vorites	No	M			
()			Add			

6,信号源配置,**把建立的输入源与 6430 的硬件接口对应起来。** 硬件接口接的是什么,软件上就怎么设置。

Ĺ	<	CONFIGURE SOURCES Master Chassis Source Assignment	Fini	sh
	Source	Name	Input Le	vel
Source 1		< NONE >	0 dB	•
Source 2		< NONE >	0 dB	•
Source 3		< NONE >	0 dB	•
Source 4		< NONE >	0 dB	▼
Source 5		< NONE >	0 dB	•
Source 6		< NONE >	0 dB	•

点击 source 1,选择 该输入接口接的信号源,此例中为 player1

购买咨询邮箱: info@dvaco.com 技术咨询与支持邮箱: support@dvaco.com



	Assign So	ource 1		
< NONE >				
input 1				
input 2				
input 3				
input 4				
player1_(analog,blue)				
player2_(analog,green)				
			Cancel	Ok

7,把所有信号源都配置完后。如下。点击 finish 完成。

t	<	CONFIGURE SOURCES Master Chassis Source Assignment	Fini	sh
	Sourc	e Name In	put Le	vel
Source 1		player1_(analog,blue)	0 dB	•
Source 2		player2_(analog,green)	0 dB	▼
Source 3		player3_(analog,pink)	0 dB	▼
Source 4		< NONE >	0 dB	•
Source 5		< NONE >	0 dB	•
Source 6		< NONE >	0 dB	•

## 五, 配置输出区域

1,回到配置首页,点击 configure zones ,配置输出。

购买咨询邮箱: info@dvaco.com 技术咨询与支持邮箱: support@dvaco.com



		System Configuration
Configure	Chassis	
Configure	Sources	
Configure	Zones	
Configure	User Interfaces	
Configure	Home Theater TV	
Configure	Handheld Remote	

2,进入输出 zone 的窗口,可以修改名字。由于已经加入了一个扩展 6430 所以 他从 6 区扩展到 12 区。

ERC6430 F8-5	57-2E-00-15-0C				
+			CONFIGURE ZONES		
L			Zone Name		
		Zone	Name		
Zone 1			living room		
Zone 2			Zone 2		
Zone 3			Zone 3		
Zone 4			Zone 4		
Zone 5			Zone 5		
Zone 6			Zone 6		
Zone 7			Zone 7		
Zone 8			Zone 8		
Zone 9			Zone 9		

3,下一步配置各个输出的高音 Treble 低音 Bass 和 等响度 Loudness 和音量配 置不作出更多介绍,可以参考其他文档。

(等响度 解释: 等响度控制其作用是在低音量时提升高频和低频成分的音量, 使得低、中、高部分的响度比例保持和在大音量时的响度比例相同。), Power on behavior: 电源开启后操作,有两个选项, Default 默认和 Last set。



完成后各项设置后,点击

图标退出配置页面。

购买咨询邮箱: info@dvaco.com 技术咨询与支持邮箱: support@dvaco.com